



This Quick Installation is meant to help you install the product quickly and easily. For detailed instructions on installation and configuration and further setup options, please consult the User Guide.

Instant Wireless™ Series

## Wireless PC Card



### WPC54A

#### System Requirements

- Pentium-Class 200MHz or Faster Processor
- 64MB RAM Recommended
- One Available Type II or Type III PCMCIA CardBus Slot
- One CD-ROM Drive
- Windows 98SE, Me, 2000
- 5 Mb of free disk space for utility and driver installation

#### Package Contents

- One Wireless PC Card (IEEE 802.11a) (1)
- One Setup CD-ROM with User Guide (2)
- One Quick Installation Guide
- One Registration Card



## 1 Installing the Wireless PC Card Software

**Note:** Make sure to install the software before you install the Wireless PC Card.

A. Insert the **Setup Wizard** CD into your CD-ROM Drive. The Setup Wizard should run automatically, and the following screen should appear. If it does not, click **Start** and choose **Run**. In the box that appears, enter **D:\setup.exe** (where “D” is the letter of your CD-ROM drive.)



B. Click on the **Setup** button.

C. When the screen at the right appears, click **Next** to continue.



D. The Warranty Policy will appear. Click **Yes** if you agree, or **No** to end the installation.



E. The InstallShield Wizard will automatically choose a folder where the Setup Wizard will install the files. Click **Next**.



F. The InstallShield Wizard will ask you to choose a wireless mode. Choose the mode that applies to your network. **Ad-Hoc Mode** is used for simple peer-to-peer networking or sharing of local resources between wireless networked PCs. **Infrastructure Mode** allows a wireless network to be integrated into an existing, wired network through an access point, permitting roaming between access points while maintaining a connection to all network resources. Select the radio button next to your choice, and click **Next**.



Continued on back

G. Enter the name of the SSID (Service Set Identifier) for your Ad- Hoc or Infrastructure setting. The SSID must be identical for all points in the network. The default setting is linksys (all lowercase.) Click **Next**.



I. The InstallShield Wizard will begin copying the files. The bar in the middle of the dialog box shows the percentage of the files that are copied.



H. The InstallShield Wizard will ask you to review your settings before starting to copy files. Click **Back** to review or change any settings. Click **Next** if you are satisfied with your settings.



J. The screen below might appear next. Click on the **Yes** button if you want to continue the installation. Click on the **No** button if you want to cancel the installation.



K. You will see this screen when the Wireless PC Card Setup Wizard has been successfully installed.



*The software installation is complete. For setup information or any other questions, refer to the product's User Guide.*



C. You may see several screens appear as the driver installation is finalized. This is normal. No input should be necessary, and the screens should disappear when the card is ready for use.

**Note to Windows 2000 Users:** You may be prompted at this time that a digital signature has not been found; this is normal. The WPC54A has been verified to run on Windows 2000. Click **Yes** to continue, and then click the **Finish** button to end the hardware detection process.

*Installation of the Wireless PC Card is complete. For setup information or any other questions, refer to the User Guide.*

## 2 Installing the Wireless PC Card

**Note:** Make sure to install the software before you install the Wireless PC Card.

A. Locate an available Type II or Type III PCMCIA CardBus slot on your notebook computer.

B. With the Wireless PC Card's 68-pin connector facing the PCMCIA CardBus slot and the "Wireless PC Card" label facing up, as shown below, slide the Wireless PC Card completely into the PCMCIA CardBus slot.